



LaserPecker Air Assist

User Manual | Benutzerhandbuch | Manual de Usuario | Manuel d'utilisation



Air Assist x 1



Mini USB to Mini USB Cable x 1




Filter x 2




Tube (1.0 m) x 1




User Manual x 1

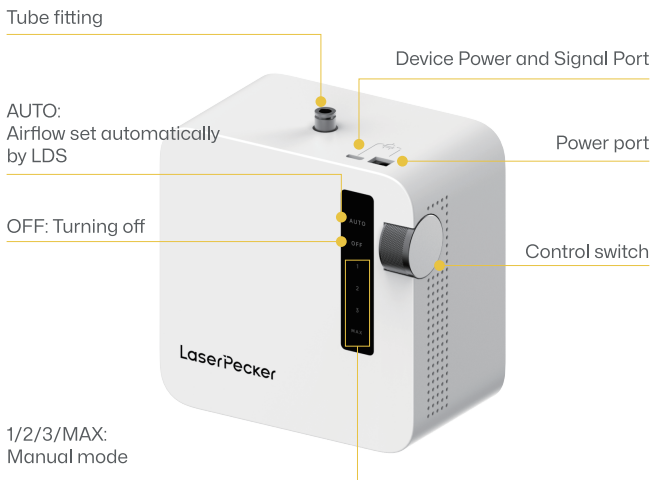

Connect the LX2 to the Air Assist for power supply and insert tube accordingly.

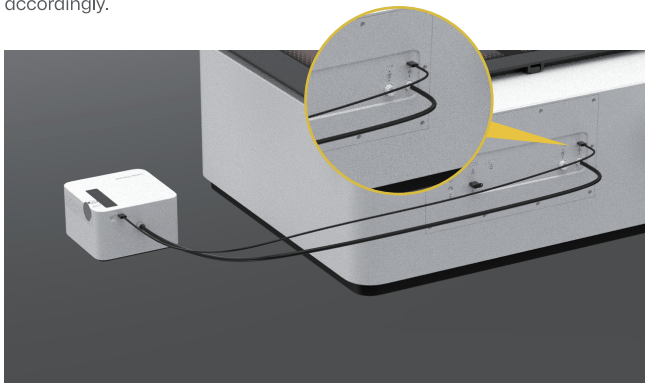

You can manually adjust the airflow based on processing requirements. Alternatively, you can set the air assist to **AUTO** mode, allowing the LDS software to automatically adjust during operation according to the settings.

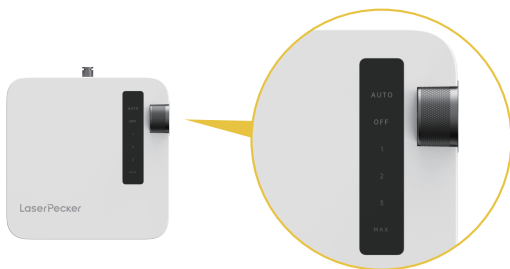

1 The airflow from the Air Assist decrease after some time. Why?


The possible cause is that the filter at the bottom of the Air Assist getting clogged. Please replace the filter accordingly.

2 Can the LX2 Air Assist be used with other products?

Yes, you can connect a 24V DC power to the Air Assist. However, the AUTO mode will not be available in this case.

3 How often should the filter be replaced?

The filter can last for over 6 months in general. The lifespan may vary slightly depending on actual usage. If you do not notice a significant decrease in airflow, the filter can continue to be used.

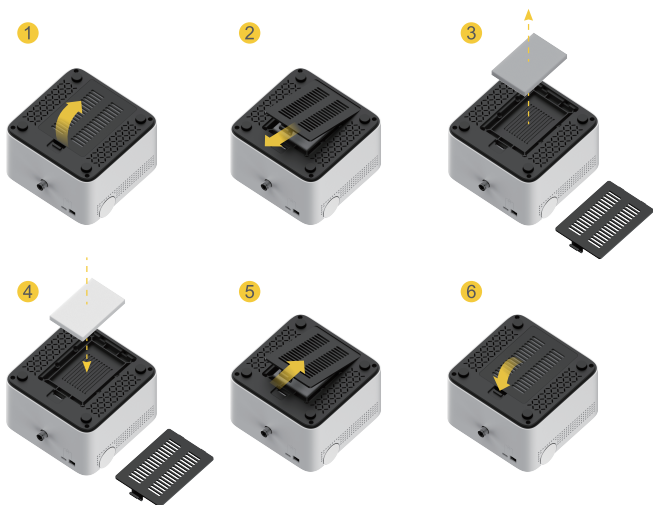

Technical Specifications

EN

Dimensions	140 x 148 x 93 mm
------------	-------------------

Weight	1.5 kg
--------	--------

Maximum noise level	55 dB
---------------------	-------

Air output	≥28L/min
------------	----------

Rated Power	24v = 2.5 A
-------------	-------------

Pressure	≥33kpa
----------	--------

After-sales Information

If you encounter any issues, please do not hesitate to reach out to our customer support team at support@laserpecker.com

Disclaimer

Thank you for choosing LaserPecker! This manual relates to your safety, legal responsibilities and rights. Please read and get familiar with all safety precautions and procedures before using the product. If you do not use the product according to the instructions and requirements of the manual, or mis-operate the product due to misunderstanding, etc., LaserPecker (Hingin Technology Co., Ltd.) shall bear no responsibility for any loss resulting therefrom.

Given the conditions and methods of use of this product are beyond the control of LaserPecker, LaserPecker shall not be liable for any of the following consequences, which shall be borne by the user:

Personal injury, property loss, and product damage caused by improper operation, failure to follow the manual or other uncertainties.

The work that user created using the LaserPecker product infringes intellectual property rights of the third party or violates relevant laws and regulations.

Personal injury, property loss, and product damage that may arise during the installation, transportation, storage, use, maintenance, and disposal of this product.

All official LaserPecker materials have undergone safety testing and are compatible with this product. LaserPecker shall not be liable for material safety or engraving quality if the user uses non-LaserPecker official materials.

Copyright

Copyright of this manual, as well as the rights to the software and hardware related to this product, are owned by Shenzhen Hingin Technology Co., Ltd. (hereinafter referred to as "Hingin Technology").

LaserPecker is a registered trademark of Hingin Technology.

The information in this manual may be changed without notice; The information in this manual does not constitute a commitment of the Company. Please learn about the latest update from(<https://www.laserpecker.net>). The contents of this manual shall not be rewritten or forwarded in any form or for any purpose without the written permission of the Company.

LaserPecker